



Correct Oxylog Circuit Setup

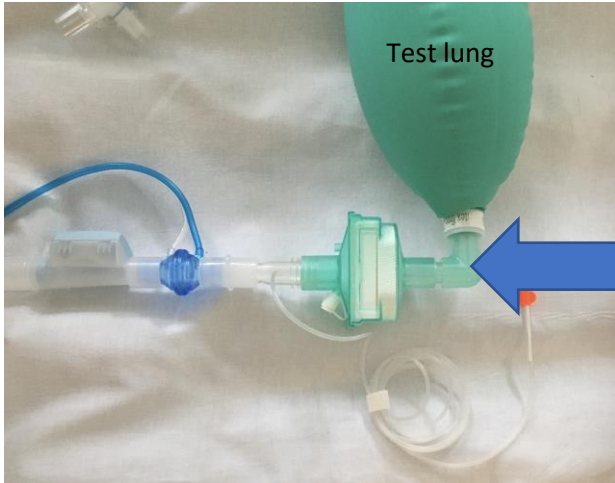

Solid angle piece
from Waters circuit

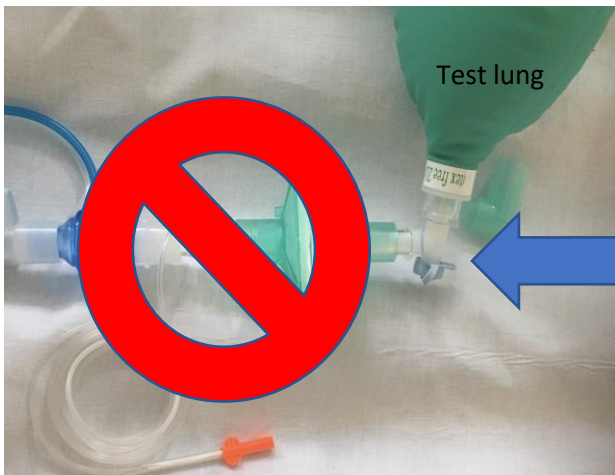

Angle piece as supplied
may open and generate
aerosol

HME/filter at patient end. Not required at ventilator end of tubing

Reduced capability to allow 'remote' management because of fewer alarms than ICU ventilators – turn up volumes and increase reliance on patient parameters/monitoring equipment. ET CO₂ ideally